



Setup Guide Freedom (TX-7471)

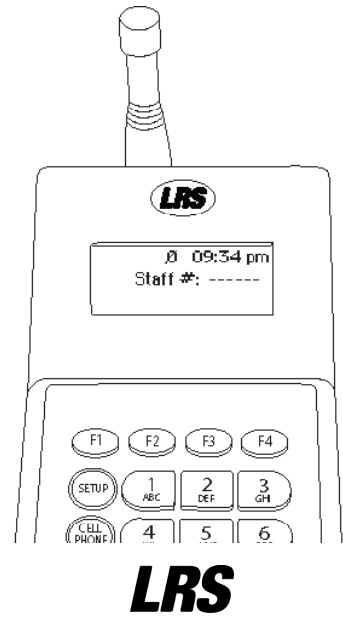


Items Included:




1

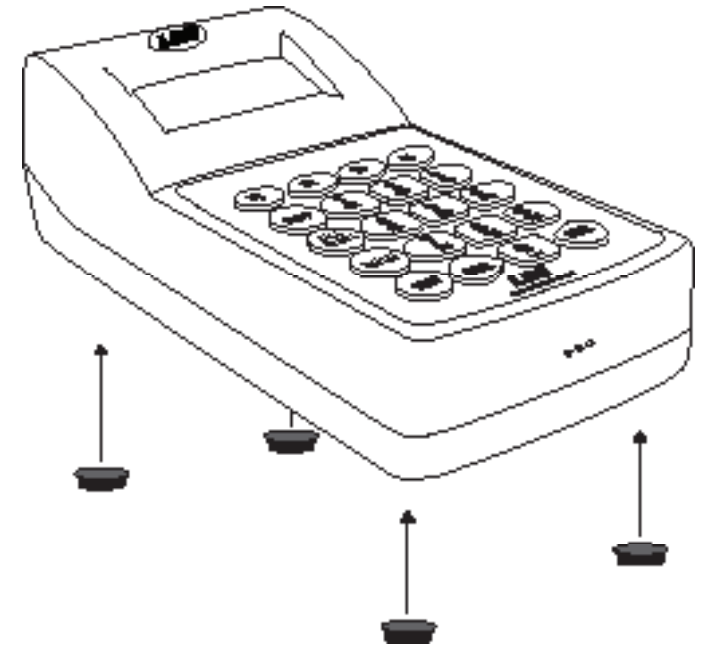


2

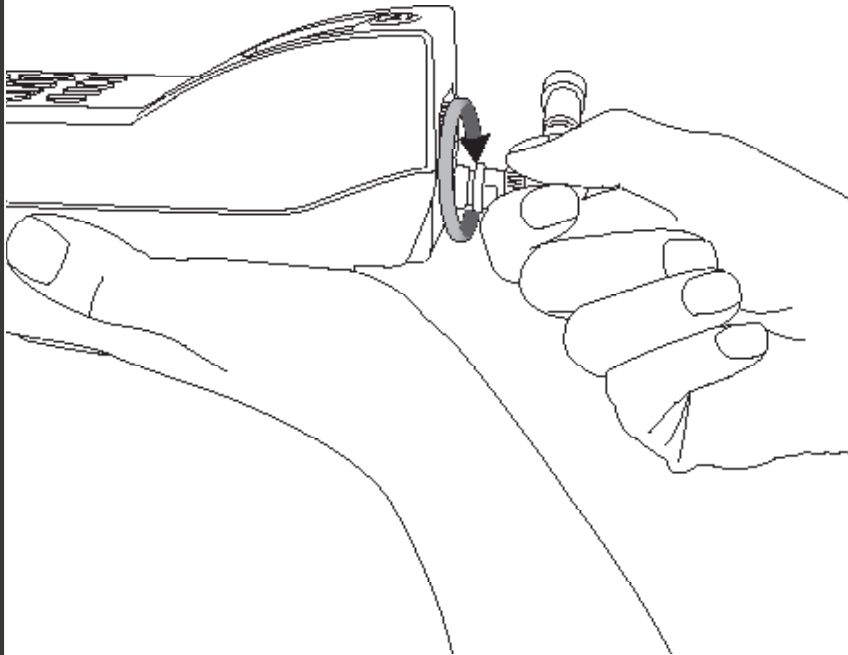


3

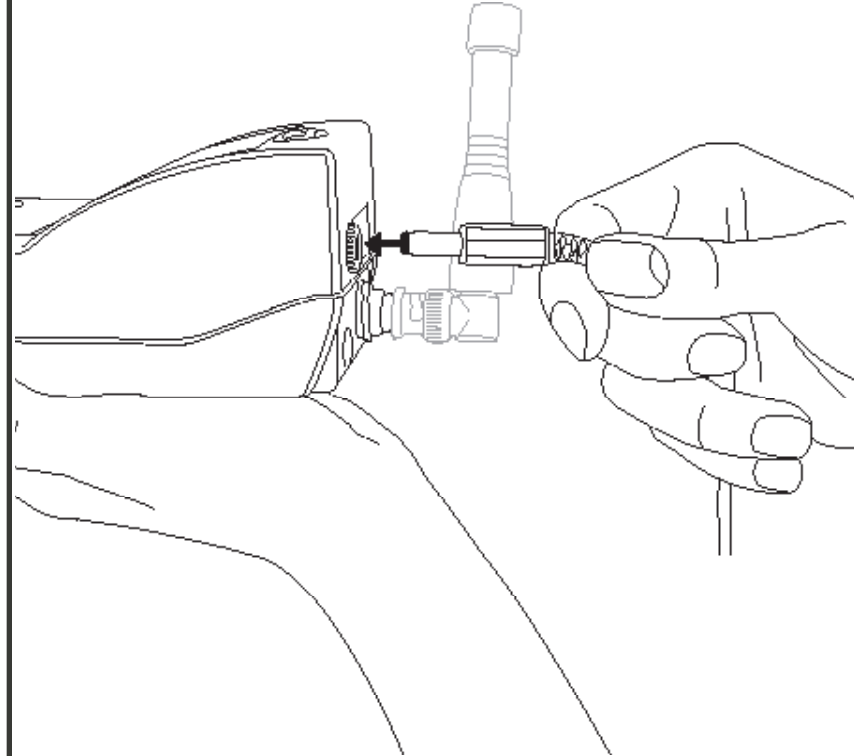


4

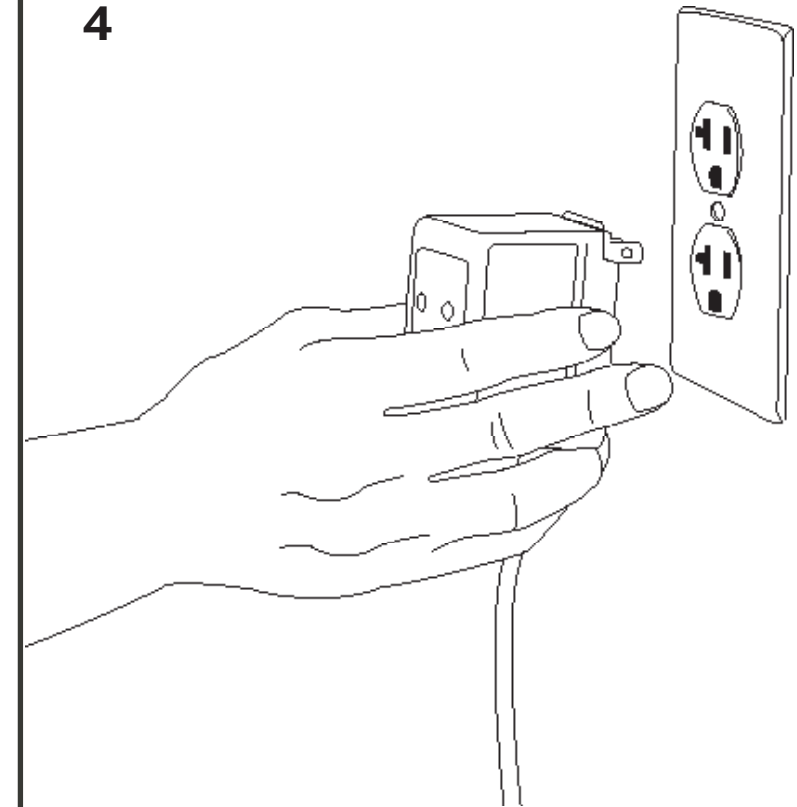


5

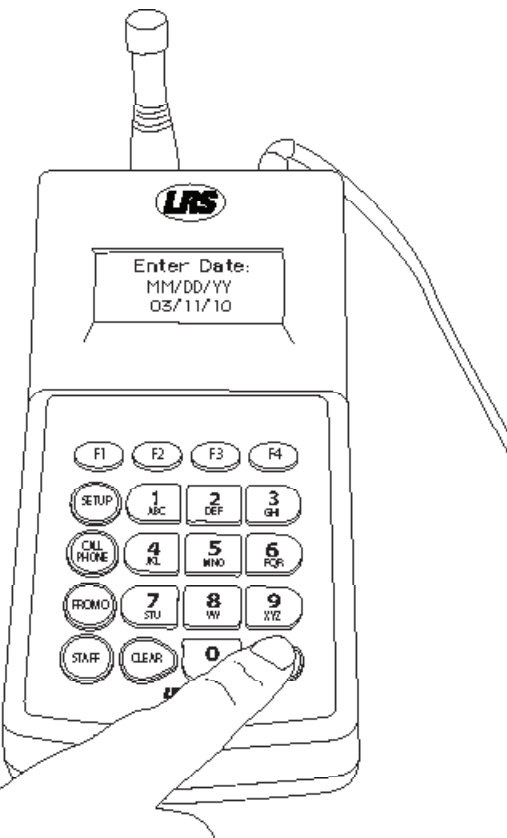

6

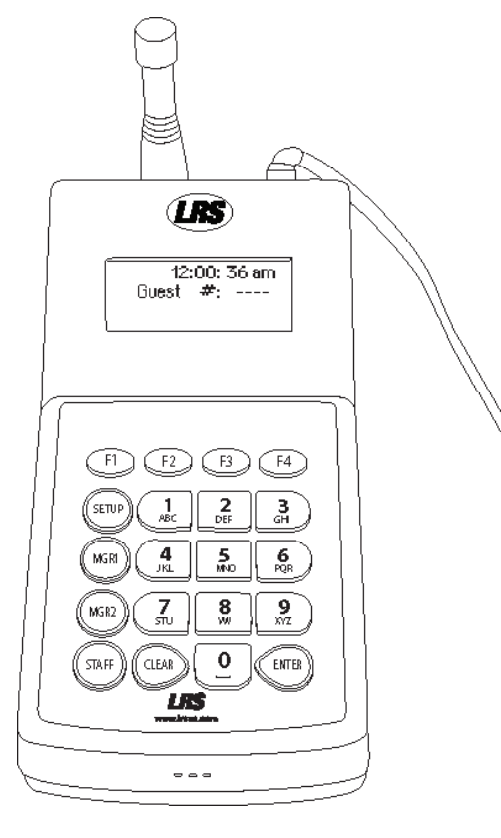

For Cell Phone Messaging:

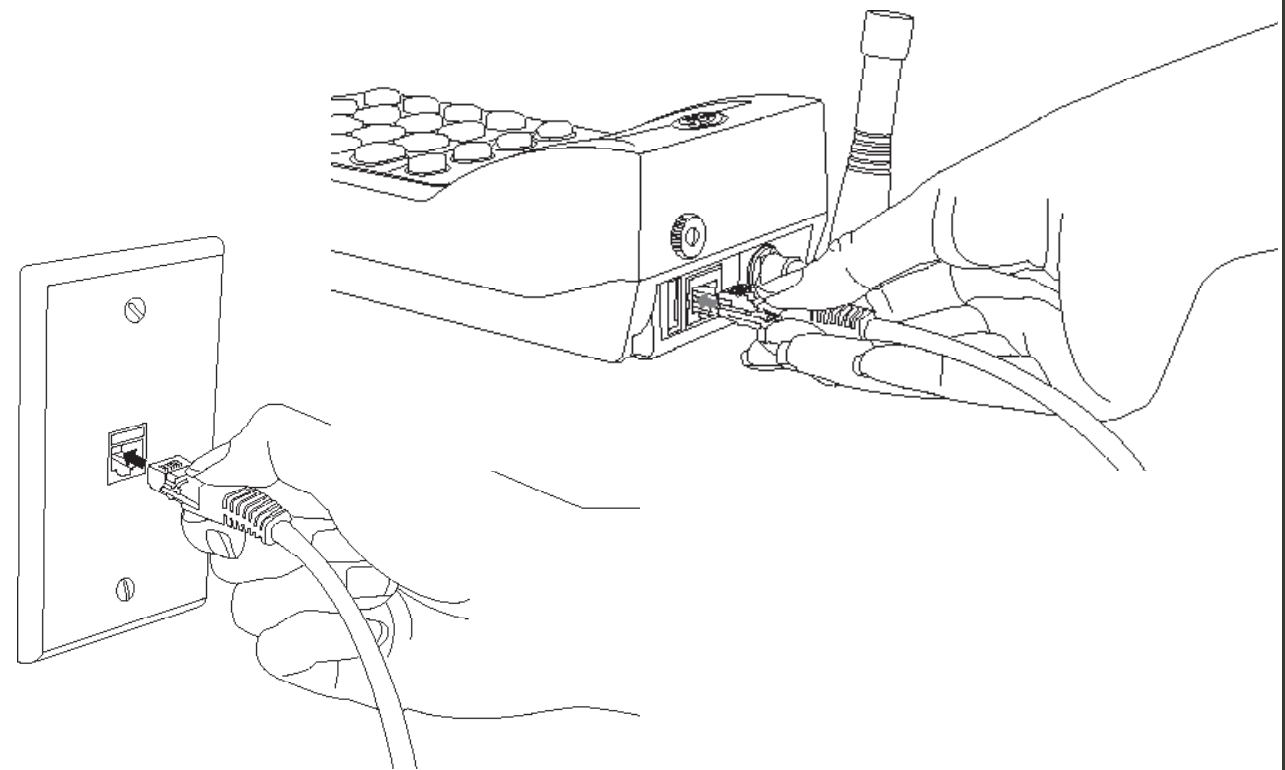

FREEDOM TRANSMITTER (TX-7471) BASIC OPERATIONS GUIDE

PAGING

GUEST PAGERS: Return guest pagers to charging unit after paging

Non-Alphanumeric (Adverteaser, Coaster Call pagers)

1. Main screen displays – **Guest #:** - - - -
2. Enter pager number assigned to guest at handout
3. Press **ENTER** to send page

Alphanumeric (Alpha Coaster pager)

1. Main screen displays – Guest #: **Guest #:** - - - -
2. Enter pager number assigned to guest at handout
3. Enter code (000-099) (see Preset Messages Table)
4. Press **ENTER** to send page
(You may also Press **F1** (V1), **F2** (V2) or **F3** (V3) to send the message with 1, 2 or 3 vibrations or **F4** (Exit) to Cancel the page)

PRESET MESSAGES

USING MESSAGE CODES

When prompted for a message:

1. Enter message number code (and a numeric extension – optional)
2. Press **ENTER**

Example: Send a message to call extension 123

From the Preset Message Table to the right, choose – 006 (Call Ext)

Enter code **0-0-6-1-2-3** (Displays: CALL EXT 123)

CREATE ADDITIONAL ALPHA MESSAGES: For Alpha pagers only

1. Press **SETUP**
2. Enter Password (Default: **5-6-7-8-9**)
3. Press **3 OFF** Other
5. Press **1 ARC** (Canned Msgs.)
6. Press **F1** (EDIT)
7. Press **F2** (NEW) to write a new message (Press **F1** (EDIT) to edit displayed message)
8. Enter message using alphanumeric typing (i.e. for letter 'E' press #2 twice)
9. Press **ENTER** to save then **F4** (EXIT) when finished

REPEATER

Place the Repeater just inside the outer edge of the signal area you are trying to extend.

To Turn On:

1. Press **SETUP**
2. Enter Password (Default: **5-6-7-8-9**)
3. Press **1 ARC** System
4. Press **F2** (DN-Down)
5. Press **1 ARC** Repeat Pages
6. Press **F1** (Yes) to turn on

For advanced features, go to support.lrsus.com to download a complete user manual. For technical support call Long Range Systems at 800-437-4996. For warranty information, visit lrsus.com/warranties

LRS

800-437-4996 | 214-553-5308
www.lrsus.com

XU-0160 REV. A 022520

STAFF PAGERS

Non-Alphanumeric (Star Pager)

1. On keypad press **STAFF** (Display =) **Staff #:** - - - -
2. Enter staff pager number to be paged
3. Press **ENTER** to send page

Alphanumeric (Rechargeable or Battery Operated Alphanumeric pagers)

1. On keypad press **STAFF** (Display =) **Pager #:** - - - -
2. Enter staff pager number to be paged
3. Enter message code (000-099) (see Preset Messages Table)
4. Press **ENTER** to send page
(You may also Press **F1** (V1), **F2** (V2) or **F3** (V3) to send the message with 1, 2 or 3 vibrations or **F4** (Exit) to Cancel the page)

ALL STAFF PAGE: Page all alphanumeric staff pagers simultaneously

1. Press **STAFF**
2. Press 9-1-1 then **ENTER**
3. Enter message number code (000-099)
4. Choose **F1** (V1), **F2** (V2) or **F3** (V3) for 1, 2 or 3 vibrations

MISC. FUNCTIONS

ANTI-THEFT MODE: (Signal pagers that are out of range)

1. Press **SETUP**
2. Enter Password (Default: **5-6-7-8-9**)
3. Press **1 ARC** System
2. Press **1 ARC** Anti-Theft
3. Press **F1** (ON) to activate anti-theft mode or (press **F4** to turn OFF)
4. Main screen display will show "T" on upper left corner when turned on

Set Time/Date:

1. Press **SETUP**
2. Enter Password (Default: **5-6-7-8-9**)
3. Press **1 ARC** System
4. Press **3 OFF** Date/Time
5. Press **1 ARC** for Date Format, Press **2** for Time Format, Press **3 OFF** to Set Date, or Press **F2** (DN-Down) then Press **1 ARC** to Set Time

CELL PHONE PAGING

Entering a Cell Phone Number:

1. When a customer first checks in, press **CELL PHONE**
2. Enter the customer's cell phone number and press **ENTER**

PRESET MESSAGE CODES

Code Message

000 Phone Call	024 Voice Mail	047 Nurse	071 Teller
001 Sales Call	025 Dressing room	048 Register	072 Officer
002 Manager	026 Price check	049 Owner	073 Buffet
003 Customer	027 Department	050 Check	074 Diaper change
004 Room	028 Cashier	051 Drink	075 Child crying
005 Visitor	029 Office	052 Food	076 To nursery
006 Call Ext	030 Table	053 Service	
007 MTG Room	031 Winner	054 Seat	
008 Lane	032 Pickup	055 Booth	
009 Aisle	033 Dock	056 Lobby	
010 Void	034 You have mail	057 Help	
011 Stamps	035 Table ready	058 Restroom	
012 Change	036 No special	059 Valet	
013 Station	037 Hole	060 Car	
014 Machine	038 Kitchen	061 Bus	
015 Operator	039 Bar	062 Bay	
016 Emergency	040 Door	063 Low battery	
017 XX Minutes	041 Survey	064 Error	
018 Tee	042 T-nnn Q-mm	065 Exit	
019 Pro Shop	043 Break	066 Fax	
020 Starter	044 Fire	067 Host	
021 Service drive	045 Unit	068 Space	
022 Showroom	046 Window	069 Location	
023 Parked Call		070 Nursery	

CONNECTING TO AN ETHERNET NETWORK

1. Press **SETUP**
2. Enter Password (Default: **5-6-7-8-9**)
3. Press **3 OFF** Other
4. Press **F2** (Down)
5. Press **3 OFF** Network
6. Press **1 ARC** Enabled
7. Press **F1** (Yes)
8. Connect Network Cable

TURN ON CELL PHONE PAGING

1. Press **SETUP**
2. Enter Password (Default: **5-6-7-8-9**)
3. Press **1 ARC** System
4. Press **2 OFF** Cell Paging
5. Press **1 ARC** Enabled
6. Press **F1** (Yes)

(Note: The cell phone number entered must include the area code)

3. The transmitter will display a pager number for that cell phone number
4. Write that pager number down for future reference
5. Press **ENTER** to complete the cell phone entry process

Paging a Cell Phone:

1. Main screen displays –
2. Key in the pager number written down earlier for the cell phone you wish to page
3. Press **ENTER** to page **Guest #:** - - - -

WAIT REDUCER

Connecting to an Ethernet Network:

1. Turn on Network
2. Press **SETUP**
3. Enter Password (Default: **5-6-7-8-9**)
4. Press **1 ARC** System
5. Press **F2** (Down)
6. Press **3 OFF** Wait Reducer
7. Press **F1** (Yes)

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

“RF Exposure Guidance

In order to comply with FCC / ISED RF Exposure requirements, this device must be installed to provide at least 20 cm separation from the human body at all times.

Afin de se conformer aux exigences d'exposition RF FCC / ISED, cet appareil doit être installé pour fournir au moins 20 cm de séparation du corps humain en tout temps.”